

KEEP THIS MANUAL FOR FUTURE REFERENCE

11

Engineering and technical data are subject to change without notice.

FEDERAL INDUSTRIES Toll Free 1(800) 356-4206 215 FEDERAL AVE WI Phone (608) 424-3331

Belleville, WI 53508 Fax: (608) 424-3234

CONTENTS

INTRODUCTION	.4
WARNING LABELS & SAFETY INSTRUCTIONS	.5
PRE-INSTALLATION PROCEDURES	-
INSTALLATION INSTRUCTIONS Locating The Display Case	
Grill Removal	
Removing Case From Shipping Skid	
Removing Packaging Material	
Leveling The Case	
Condensate Evaporator	
-	
ELECTRICAL CONNECTION & GROUNDING INSTRUCTIONS	
Electrical Supply Wiring	
Grounding Requirements	
Optional permanent connection	.9
OPERATING INSTRUCTIONS1	10
Initial Start-Up	
Light Switch & Lights	
LED Light Replacement1	
Digital Display1	10
Placing Product in Case1	
Energy Saving Night Curtain1	0
Electronic Temperature Control	
Powering On Control	
Adjusting Set Point	
Error Codes1 Optional Electronic Temperature Control1	
Powering On Control	
Adjusting Set Point1	
Error Codes	
Temp Probe Common Resistance Chart1	16
ELECTRONIC CONTROL FUNCTIONALITY	17
Electronic Control	
Operation	
Defrost Cycle1	
Control Factory Setting1	
Control Display	19
Minimum Run Timer Feature1	19
Maximum Run Timer Feature1	

REFRIGERATION OPERATION	19
Self-Contained Refrigeration Operation	19
Dual Pressure Control (Self-Contained Models Only)	19
Remote Refrigeration	
Electronic Expansion Valve (EEV)	20
Remote Refrigeration Operation	21
CLEANING INSTRUCTIONS	
Cleaning The Condenser Coil	22
Cleaning The Condensate Pump	22
Cleaning The Acrylic Air Deflector	23
Daily Cleaning	23
Weekly Cleaning	24
SHELVES	
Installation & Removal	25
SERVICE INFORMATION	26
Pre-Service Checklist	
Special Service Situations	28
SALE & DISPOSAL	28
Owner Responsibility	28
REFRIGERATION & ELECTRICAL DATA	29
RSSL378/360	29
RSSL478/460	0 & 31
RSSL578	
RSSL678	
NSSL378, NSSL478, NSSL578, NSSL678	36
REPLACEMENT PARTS	hru 44
RSSL DISPLAY AREA & VOLUME	45
WIRING DIAGRAMS	hru 53

INTRODUCTION

Thank you for purchasing a Federal Industries Merchandiser. This manual contains important instructions for installing and servicing the RSSM, Refrigerated Self-Service Merchandisers. A repair parts list is also included in the manual. Read all of these documents carefully before installing or servicing your case.



NOTICE

Read this manual before installing your case. Keep this manual and refer to it before doing any service on the equipment. Failure to do so could result in personal injury or damage to the case.

NOTICE

Installation and service of the electrical components in the case must be performed by a licensed electrician.

The portions of this manual covering components contain technical instructions intended only for persons qualified to perform electrical work.



DANGER

Improper or faulty hookup of electrical components in the case can result in severe injury or death.

All electrical wiring hookups must be done in accordance with all applicable local, regional, or national standards.

NOTE: UNIT MUST BE GROUNDED

REGISTRATION & SERIAL NUMBER

It's important to keep a record of the model and serial number of your merchandiser for warranty and part identification. Please write them here for your quick reference.

Register your product online! Visit our website at <u>www.federalindustries.com</u> and register your product today.

Case Model______Serial Number_____

We're here to provide you with the best possible experience with your new product, however, we cannot cover everything about your merchandiser in this manual, so if you have any additional questions or issues, please see the SERVICE INFORMATION PAGE to find who you should contact.

WARNING LABELS AND SAFETY INSTRUCTIONS



This is the safety-alert symbol. When you see this symbol on your case or in the manual, be alert to the potential for personal injury or damage to your equipment.

Be sure you understand all safety messages and always follow recommended precautions and safe operating procedures.



NOTICE TO EMPLOYERS

You must make sure that everyone who installs, uses, or services your case is thoroughly familiar with all safety information and procedures.

Important safety information is presented in this section and throughout the manual. The Following signal words are used in the warning and safety messages:

- **DANGER:** Severe injury or death <u>will</u> occur if you ignore the message.
- WARNING: Severe injury or death <u>can</u> occur if you ignore the message.
- **CAUTION:** Minor injury or damage to your case <u>can</u> occur if you ignore the message.
- **NOTICE:** This is important installation, operation, or service information. If you ignore the message, you may damage your case.

The warning and safety labels shown throughout this manual are placed on your Federal Industries case at the factory. Follow all warning label instructions. If any warning or safety labels become lost or damaged, call our customer service department at 1(800) 356-4206 for replacements.



This label is located on the back of the display case and on the front of the case behind the access panel. CAUTION HAZARDOUS MOVING PARTS DO NOT OPERATE UNIT WITH DISPLAY PANS REMOVED.

This label is located below the display pan.

PRE-INSTALLATION PROCEDURES

Inspection For Shipping Damage

You are responsible for filing all freight claims with the delivering truck line. Inspect all cartons and crates for damage upon arrival. If there is damage to shipping crates, cartons, or if a shortage is found, note this on (all copies) of the Bill Of Lading prior to signing.

If damage is discovered when the case is uncrated, immediately call the delivering truck line and follow-up the call with a written report indicating concealed damage to your shipment. Ask for an immediate inspection of your concealed damaged item. Crating material must be retained and shown to the inspector from the truck line.

INSTALLATION INSTRUCTIONS

Locating the Display Case NOTE: This case is designed for indoor use only.

The case should be **located** where it is not subjected to the direct rays of the sun, heating ducts, grills, radiators, or ceiling fans, nor should it be located near open doors or main door entrances. Avoid locations where there is excessive air movement or air disturbances and avoid high humidity locations such as near cases with water misting or fogging devices.

The condenser air inlet is located in the front of the case. Do not block this inlet and do not locate the air inlet near a source of heat. Clearance of 6" minimum must be maintained at the back of the case for condenser discharge air. Clearance at the top of

the case should also be at least 8".

Do not build this unit into an alcove and do not locate where condenser discharge air cannot escape or where warm condenser air is allowed to re-circulate.

Grill Removal

WARNING: Electrical shock hazard. Do not operate unit with panels removed.

Must remove front and rear base grills for merchandiser installation. The front base grill is secured with fast lead captive screws, and the rear base grill is secured with self threading screws.

Both base grills must be replaced after merchandiser installation. Base grills must be in place for proper operation of the merchandiser.



CAUTION: If a Johnson bar or pry bar is used to move the case, make certain that the case is lifted under the welded steel frame, and not by the end panels of the case. Damage to the ends will result from lifting under the end panels.

Move the case as near as possible to the final location before removing it from the shipping skid. Having removed the front and rear compressor compartment grills. Remove the (three or four sets of bolts, nuts, and washers depending on case size) that secure the case to the shipping skid. Discard these bolts, nuts, and washers.

Removing Packaging Material

Remove bubble wrap and packing material for all shelves, etc. If it is necessary to remove tape residue from various materials, use cleaning compounds recommended in the cleaning section of this manual.

Leveling the Case

The case must be level for proper drainage of defrost water to the condensate evaporator or condensate pump.

Check the level of the case along the front rail and along the top of the display pan. Shim under the case frame as needed to level the case. It is recommended that the leveled case be sealed to the floor with an NSF Listed Sealant.

Condensate Evaporator

NOTICE: Steam from the condensate evaporator may be visible around the base of the merchandiser during normal operation.

This merchandiser may be furnished with an electric condensate evaporator, or a electric condensate pump. Plumbing connections are not required, unless merchandiser is specifically ordered without a condensate evaporator or pump.

The condensate evaporator can be removed from the merchandiser and the condensate drain can be plumbed to a external drain to conserve energy. To remove the condensate evaporator, disconnect the wires at the condensate evaporator. This must be done by a qualified electrician.

This is an open merchandiser and can produce a large amount of condensate water. To ensure that adequate evaporator capacity is available, a high wattage heater is used.

Make sure that the condensate drain line has not been dislodged during shipment and that the drain trap terminates properly over the water reservoir.

<u>Lights</u>

Standard Top Light

The case comes with one standard top light which is internally wired to the power source. The light switch is located on the left top ceiling behind the air discharge honey comb.

Optional Shelf Lights

If optional shelf lights are furnished, make certain that the shelf light cords are completely inserted into the sockets in the back panel and end of led lights or lights will not work

The power supply used on this case allows for removal of one or more shelf lights without affecting the remaining lights.

When plugging or unplugging light cords, turn the light switch to the "off" position.

ELECTRICAL CONNECTION AND GROUNDING INSTRUCTIONS

Electrical Supply Wiring



DANGER: Improper or faulty hookup of electrical components in the display case can result in severe injury or death.

THIS CASE MUST BE GROUNDED

Optional Permanent Connection

-Only a licensed electrician must perform all case electrical connections.


-All electrical wiring hookups must be done in accordance with all applicable local, regional, or national electrical standards.


-A separate circuit for each display case is required to prevent other appliances on the same circuit from overloading the circuit and causing malfunction.

-The electrical service must be grounded upon installation.

-See the electrical data plate located at the rear of the case for circuit load and wire current capacity.

-Standard Base Electrical Connection: The electrical connection box is accessible from the rear of the case. Power Supply Wiring can be routed through the floor of the base frame or through the access hole in the rear of the unit. Remove electrical box cover to access electrical connections.

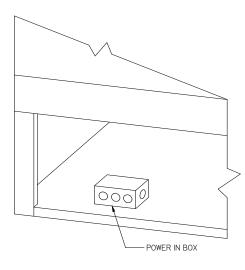

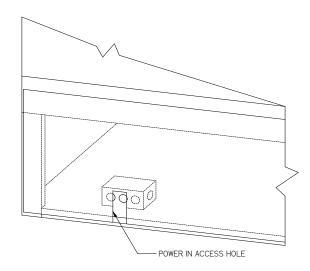

OPERATING INSTRUCTIONS

Initial Start-Up

-After completing the items in the installation section of this manual. The case is ready to be put into service. On self-contained models, the service valves on the refrigeration system are back-seated when the unit leaves the factory.

-RSSL cases are designed to operate at 40° to 41° F. under ambient conditions not to exceed 75° F. and 55% relative humidity.

-Nearly all open refrigerated merchandisers operate better when loaded with product than when empty. If a check is made of the case operating temperatures, perform this check with product in the case.

-Open refrigerated merchandisers are not intended as storage refrigerators and will not "pull down" room temperature products efficiently. Load case interior with pre-chilled product only.

Light Switch And Lights

The light switch is located in the ceiling. This switch operates the interior lights only. If optional shelf lights are installed, they are also controlled by this switch.

Led Light Replacement

The light is attached to the shelf with plastic spring clips. To remove a light, un plug cord from end of bulb and pull down.

When replacing lights, use direct equivalents to the original bulbs.

Digital Display

This unit is equipped with an electronic temperature control with Digital Display. The Display show a number 1 thru 9 to indicate temperature level.

Placing Product In Case

Do not overload the case with product to a point where the top air discharge grill or the bottom air intake grill are blocked, or where the air curtain created by the discharge air is blocked.

LOAD CASE INTERIOR WITH PRE-CHILLED 38deg OR COLDER PRODUCT ONLY.


Energy Saving Night Curtain

This unit is equipped with an energy saving night curtain. The night curtain is located in the top inside front of the canopy. To use the night-curtain pull down and latch on front panel just below the clear acrylic air deflector when case is not in use.



NOTICE: This refrigerated display case is designed to operate in a maximum environment of 75 DEG. F and 55% relative humidity. Exceeding these limits will cause poor case

Electronic Temperature Control



Button Overview

	Press and hold this button for three seconds to turn system on (if off) or off (if on). Also used to adjust set point when in set point adjust mode
set	Press to enter set point adjust mode, confirm set point changes, and mute alarms.
××⁄- ▼ * • *	Press and hold this button for three seconds to initiate a manual defrost (and cancel defrost if initiated), also adjusts set point down when in set point adjust mode
▼ •	denost ir initiated), also adjusts set point down when in set point adjust mode

Powering on control

To turn refrigeration control power on, press and hold ⁽⁾ for approx. three seconds. The display will read "On" while the button is depressed. When the control powers on, the display will read the current set point (a number "1" thru "9"). The compressor run indicator ⁽⁾ will illuminate on the display, meaning that the compressor is running. (Note: the control may already be in the on mode when shipped from factory).

To turn refrigeration control power to off, press and hold [•]O for approx. three seconds. The display will read "Off" while the button is depressed. When the control powers off the display will flash back and forth between the relative current case temperature and "Off". The compressor run indicator ^O will be off on the display. When refrigeration control is in the off-mode cabinet lights and evaporator fans will still operate, but the compressor will not turn on causing the case to gradually reach room temperature.







Adjusting the set point

The set point is what determines how cold the display case will hold food and beverage. To adjust the set point press and hold the ⁽¹⁾ button approx. three seconds until the display begins to flash a

number. Then press the use the 0 button to scroll number up (colder) or press the \checkmark button to scroll number lower (warmer). There are nine (9) available set points numbers, the higher the number of the set point, the colder the display case will run, with setting "9" being the coldest and setting "1" being the warmest. Once you have chosen your desired setting press the 0 button again to confirm your choice.





Entering manual defrost mode

The control is programmed to automatically initiate a defrost by two different methods, involving time and temperature, as outlined in the "Defrost Cycle" section (Pg. **Error! Bookmark not defined.**) of "ELECTRONIC CONTROL PARAMETERS AND EXPLANATION OF OPERATION." While it is uncommon that the automatic defrost cycles would insufficiently defrost the case, a Manual Defrost mode is available if this situation arises. Note: The control will not allow the initiation of a manual defrost within 30 minutes of completion of another defrost cycle, manual or automatic.

To initiate a manual defrost press and hold the $\sqrt[4]{**}$ button approx. three seconds. The control will read "dEF" while the button is being held. The defrost is initiated when the defrost mode indicator $\frac{2\sqrt{2}}{**}$ illuminates on the display. The control display will then return to reading the case temperature. When the defrost mode indicator $\frac{2\sqrt{2}}{**}$ turns off the defrost is complete and the compressor will turn back on illuminating the compressor run indicator \bigcirc .



Error codes

It is possible for error codes to be displayed on the control screen. In the event of a malfunction an alarm will

sound and the alarm indicator \clubsuit will be displayed on the display. An error code or codes will flash intermittently on the display. If there are multiple codes, the display will continuously cycle through them. The following photo shows error code "E0" as an example.



Mute: You may mute the alarm by pressing and releasing the wrench button. The red ringing bell and all error codes will still be displayed. When the fault is remedied the control will return to normal operation and will automatically clear the codes from the display.

Carel Control

EO = Air sensing probe - Open or shorted E1 = Evap. coil probe - Open or shorted

Code	Description	Cause	Resolution
EO	Temperature probe	Probe signal is interrupted or	Check to ensure probe wires and quick disconnect
	error	short-circuited	are secure in control.
E1	Defrost probe error	See EO	Check probe resistance to table below. If 0 resistance is present check wiring insulation. If infinite resistance is present check for breaks in wiring (meter will likely read overload or very high in the mega-ohm range). Ensure that probes are wired per the wiring diagram provided. Replace probe if other remedies fail, or if probe resistance deviates from "Table 3" below
EE	Unit parameter reading error	Operating conditions	Remedy abnormal operating conditions. The control is rated to operate in a range of 14 to
EF	Operating parameter reading error	See EE	122°F (-10 to 50°C) and less than 90%RH non- condensing. Replace control if problem persists.

Alternate Electronic Temperature Control

Ċ	Power on/off: Press and hold to turn system on or off.
SET	Set: Press and hold to enter the set point adjustment menu.
**	Defrost: Press and hold to initiate a manual defrost.
\land	Up: Change set points when in set point adjustment menu. When not in set point menu, shows maximum temperature of air discharge probe.
\triangleright	Down: Change set points when in set point adjustment menu. When not in set point menu, shows minimum temperature of air discharge probe.



Display indication symbols

xt.k	On	Compressor on
漱	Flashing	Minimum compressor off time in progress
懋	On	Unit in defrost mode
•	Flashing	Defrost delay
	On	Condenser fan running
5	Flashing	Minimum condenser fan off time in progress
(L))	On	Alarm occurring. See error code section below.
°C/°F	On	Indicates temperature unit of measure.

Powering on control

To turn refrigeration control power on, press and hold "O" for approx. three seconds. The display will read the probe temperature when on. When the control powers on, the display will read the current probe temperature. The compressor and condenser fan run indicators (* & •) will illuminate on the display, meaning that the compressor and condenser fan are running. (Note: the control may already be in the on mode when shipped from factory).

To turn refrigeration control power to off, press and hold "O" for approx. three seconds. When the control powers off the display will read "OFF". When refrigeration control is in the off-mode cabinet lights and evaporator fans will still operate, but the compressor will not turn on causing the case to gradually reach room temperature.

Adjusting the set point

The set point is what determines how cold the display case will hold food and beverage. To adjust the set point press the "set" button. Then press "A" button to increase the set point number (colder) or press the "V" button to decrease the set point number (warmer). There are nine (9) available set points numbers, the higher the number of the set point, the colder the display case will run, with setting "9" being the coldest and setting "1" being the warmest. Once you have chosen your desired setting press the "set" button again to confirm your choice. The control cutout temperature for the selected setpoint will briefly be displayed if the setpoint was changed.

Entering manual defrost mode

The control is programmed to automatically initiate a defrost by two different methods, involving time and temperature, as outlined in the "Defrost Cycle" section (Pg.15) of "ELECTRONIC CONTROL FUNCTIONALITY." While it is uncommon that the automatic defrost cycles would insufficiently defrost the case, a Manual Defrost mode is available if this situation arises. *Note: The control will not allow the initiation of a manual defrost within 30 minutes of completion of another defrost cycle, manual or automatic.*

To initiate a manual defrost press and hold the "*" button approx. three seconds. The defrost is initiated when the defrost mode indicator * illuminates on the display. The control display will then return to reading the probe temperature. When the defrost mode indicator * turns off the defrost is complete and the compressor will turn back on automatically and the compressor and condenser fan indicator will be shown (* & *).

Control Alarms

It is possible for error codes to be displayed on the control screen. In the event of a malfunction an alarm will sound and the alarm indicator (1) will be displayed. An error code or codes will flash intermittently on the display. If there are multiple codes, the display will continuously cycle through them.

Mute: You may mute the alarm by pressing any button. The red alarm symbol (1) and all error codes will still be displayed. When the fault is remedied, the control will return to normal operation and will automatically clear the codes from the display.

Display	Description	<u>Cause</u>	Resolution
"P1"	Air discharge temperature probe failure	Probe signal is	 Check to ensure probe wires and quick disconnect are secure in control. Check probe resistance to table below. If 0 resistance is present, check wiring insulation. If infinite resistance is
"P2"	Defrost temperature probe failure	interrupted or short- circuited	 present, check for breaks in wiring (meter will likely read overload or very high in the mega-ohm range). Ensure that probes are wired per the wiring diagram provided. Replace probe if other remedies fail, or if probe resistance deviates from "Table 3" below.

Error Codes

TEMPERATURE PROBE COMMON RESISTANCE CHART				
Probe Temp	MaximumNormalMininResistance [Ω]Resistance [Ω]Resistance			
32°F(0°C)	27.83	27.28	26.74	
77°F(25°C)	10.1	10	9.9	
212°F(100°C)	1	0.97	0.94	

ELECTRONIC CONTROL FUNCTIONALITY

Electronic Control


This unit is equipped with an electronic temperature control. The control parameters are set at the factory and cannot be manually changed in the field. Control parameter changes can only be made by downloading a new set of parameters using a program chip supplied by Federal Industries. The pre-set control parameters are listed on the chart in the Settings Chart below.

Operation

The control uses two sensors, one located in the air stream and one located on the evaporator coil. The sensor located in the air stream is referred to as the temperature control sensor. The sensor located on the evaporator coil is referred to as the coil sensor.

The temperature control sensor is located inside the top air duct behind the honeycomb material and is labeled (TEMP). The sensor location is critical for proper operation on the unit. Do not move or relocate this sensor.

The coil sensor is strapped to the evaporator coil and is labeled (DEFROST). This sensor location is critical for proper operation of the unit. Do not move or relocate this sensor.

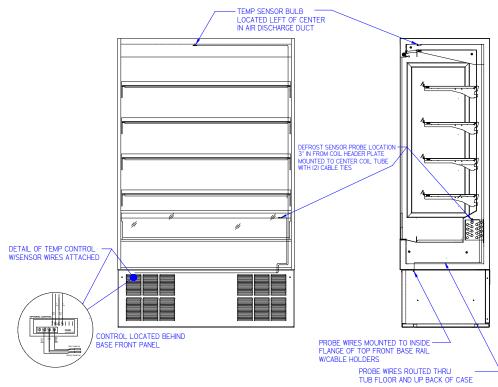

The temperature control is set to cut in at 39 degrees F. The Temp control cuts out at 24 degrees F at the coldest setting' COLD' and 34 degrees F at the warmest setting, '1' on the control readout.

Defrost Cycle

The electronic control is programmed to initiate defrost by two different methods. There are (3) programmed defrost cycles in the control which will initiate a defrost cycle every 8 hours. The unit does not have a time clock so the defrost cycles cannot be set for any specific time of day.

The electronic controller uses time to initiate the defrost cycle, and temperature to terminate the defrost cycle. The controller also has an 'On demand' defrost feature that will initiate a defrost cycle when the temperature differential between the evaporator temperature and the air temperature is more than 15 degrees for 5 minutes after 30 minutes into the refrigeration cycle.

Control Factory Settings

The control parameters are set at the factory and cannot be manually changed in the field. Control parameter changes can only be made by downloading a new set of parameters using a program chip supplied by Federal Industries

TAB	PARAMETER DESCRIPTION	RSSM
CONFIGURATION	Controller Operation Temperature Units	Degrees Fahrenheit
	Defrost Termination Method	Evaporator Sensor
	Setting "1" Cut-In (Warmest Setting)	39ºF
-	Setting "1" Cut-Out (Warmest Setting)	34ºF
	Setting "2" Cut-In	39°F
	Setting "2" Cut-Out	32ºF
	Setting "3" Cut-In	39ºF
	Setting "3" Cut-Out	31ºF
	Setting "4" Cut-In	39ºF
	Setting "4" Cut-Out	27ºF
SET-POINTS	Setting "5" Cut-In	39ºF
SET-POINTS	Setting "5" Cut-Out	25ºF
	Setting "6" Cut-In	39°F
	Setting "6" Cut-Out	23ºF
	Setting "7" Cut-In	39°F
	Setting "7" Cut-Out	22ºF
	Setting "8" Cut-In	39°F
	Setting "8" Cut-Out	21ºF
	Setting "9" Cut-In (Coldest Setting)	39ºF
	Setting "9" Cut-Out (Coldest Setting)	20ºF
COMPRESSOR	Compressor Minimum On Time	5 minutes
	Compressor Maximum On Time	60 minutes
DEFROST	Defrost Termination Temperature	45°F
	Time to First Defrost (hh:mm)	8 hr
DEFROST	Time to subsequent Defrost	8 hr
	Defrost Max Duration	30 minutes

Control Display

The control display is located in the unit base. It is programmed to display the current set point associated with the control sensor located inside the air duct at the top of the case.

Minimum Run Timer Feature

The unit controller is programmed to have the condensing unit run a minimum of 5 minutes, regardless of the control temp being satisfied. If the temperature control reaches the cut out set point before 5 minutes, the minimum run time setting in the control will keep the unit in a run cycle mode until the timer reaches 5 minutes. The refrigeration cycle will be off until the temperature control cut in temperature is reached.

This timer typically comes into effect in low ambient conditions where the unit may cycle too frequently to maintain proper product temperature.

Maximum Run Timer Feature

The unit controller is programmed to have the condensing unit run a maximum of 60 minutes. If the unit has not reached cut out temperature setting in 60 minutes, the unit goes into on off cycle. This typically comes into effect in high ambient temperature and relative humidity conditions.

REFRIGERATION OPERATION

Self-Contained Models

	See Refrigeration And Electrical Data
Refrigeration R404A Charge Prior To 01/01/2020	Pages
	See Refrigeration
	And Electrical Data
Refrigeration R449a Charge After 01/01/2020	Pages

The self-contained models are shipped from the factory with a completely operational 404A refrigeration system and require no modifications or adjustments upon installation. Case must be installed as per the installation section of this manual to provide proper condensing air cooling.

Self-Contained Refrigeration Operation

The unit temperature is controlled by the Electronic control outlined in the control section of this manual.

Note: The condenser fan is factory wired to run continuously.

Dual Pressure Control (Self-Contained Models Only)

The dual pressure control is used as a safety device and is factory set. The pressure control works on a differential. The low-pressure side is a safety to protect the compressor in the case of refrigerant loss. The high-pressure side is a safety to protect from system failure causing too high of system pressure.

The high side of the pressure control is factory set to 400psi and is not adjustable.

Low side setting for the R404a cases are set at 40psi differential for the cutout and 60psi for the cut-in.

Remote Operation

Electronic Expansion Valve (EEV) After 1/20

A traditional TXV uses springs and a temperature bulb to open and close a valve port that controls the flow of refrigerant entering the evaporator coil. An electronic expansion valve (EEV) controls the refrigerant flow much more precisely, increasing the performance and efficiency of the refrigeration system. The EEV controls the flow of Refrigerant by opening and closing the valve port based on the response to signals sent to the EEV by an electronic controller. The electronic Control bases these signals by processing information provided from a temperature sensor and pressure transducer located on the discharge side of the evaporator coil.

These sensors monitor the evaporator superheat and protects the compressor from any liquid flood back under low superheat conditions.

EEV Controller Settings


The electronic expansion valve controller also allows the use of different types of refrigerants without the need to change the expansion valve.

The controller is set from the factory to run on R449a refrigerant and will not need any changes to the control unless another refrigerant is used.

Note: Check your State and Local regulations for approved refrigerants for your install location. Federal Industries is not liable for any alternate refrigerants used.

The control is located on the base floor on the left-hand side front view .

Note: Never change any of the other setting other than the refrigerant type. It may also be necessary to change the superheat setting only when using a different refrigerant.



Changing Refrigerant

- Access the set point mode by pressing and holding the ^{emp} button until <u>Ctl</u> displays on the screen.
- Use the \square up or \square down arrows to advance through the available set points until <u>rFG</u> displays on the screen and press the \square botton.
- Use the \square up or \blacksquare down arrows until the desired refrigeration displays on the screen and press and hold the \square button until <u>rFG</u> once again displays on the screen.
- Press the ^{BACK} to return to escape the settings menue.

Changing Superheat

- Access the set point mode by pressing and holding the ^{mm} button until <u>Ctl</u> displays on the screen.
- Use the ▲ up or ▼ down arrows to advance through the available set points until <u>SSP</u> displays on the screen and press the [■] botton.
- Use the ▲ up or down arrows to set the desired superheat displays on the screen and press and hold the me button until <u>SSP</u> once again displays on the screen.
- Press the ^{BACK} to return to escape the settings menue.


<u>Remote Refrigeration Operation</u> Use pressure gauges to set pressure control.

Refrigeration R449A Charge	CHARGED IN FIELD
Remote Low Press. Switch Cut In	50 psi
Remote Low Press. Switch Cut Out	15 psi
Adjustable Head Master	200 psi
Remote High Press. Switch Cut Out	400 psi

The remote models are designed to use 449A refrigerant and shipped from the factory with the evaporator coil, expansion valve, and refrigerant solenoid valve. Filter Drier must be installed in the field. The electronic control runs identical to the Self-Contained models except the electronic control opens and closes a refrigeration solenoid valve located on the liquid line instead of turning on and off a compressor. The solenoid valve closes and shuts off the refrigeration flow to the unit and initiates a pump down cycle. This will allow the remote low-pressure switch at the condensing unit to open and shut off the remote compressor.

The condensing unit and pressure controls may be supplied from the factory for remote location installation. The condensing unit must be mounted and wired by the installer. The high low-pressure switch must be wired in series with the compressor power supply as shown in wiring diagram below.

- 1. Mount condensing unit as close to the remote display case as practical. The refrigeration line should be as short as possible and should not exceed 100 feet.
- 2. Refrigeration parts between condensing unit and case are typically supplied by installing contractor.
- 3. Route properly sized and designed refrigeration lines from the condensing unit to the cabinet. Horizontal suction lines should be pitched downward towards the condensing unit at least ½" per 10' run to aid the oil drainage. A "P"trap must be installed in the suction line at the foot of every riser to insure oil return. Dry nitrogen should be used through tubing while brazing refrigeration lines.
- 4. Suction line must be insulated the entire length with Armaflex (or equivalent). Do not run liquid line inside insulation with suction line.
- 5. If remote control is not supplied by Federal Industries, the remote high/low-pressure control must be mounted, wired and pressures set by the installer.
- 6. Leak check condensing unit, cabinet, and all connecting tubing. Cabinet and condensing unit tubing should be checked to insure no leaks occurred during shipping or from rough handling. Make certain all refrigeration valves are opened and evacuate system to 500 microns. Charge the system with refrigerant type specified on the data plates.

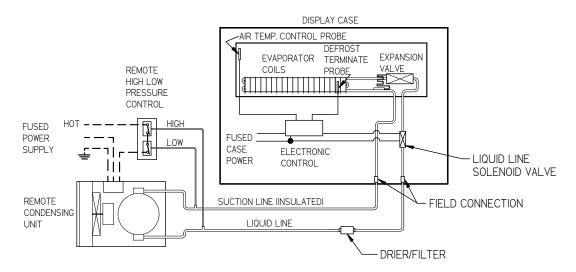

CLEANING INSTRUCTIONS

Cleaning Condenser Coil

inimum of twice per revent compressor an more frequently. ID COMPRESSOR
reven an mo

It is very important that the Condenser coil or optional air filter is cleaned twice per month to insure proper refrigeration performance and to prevent compressor failure. In some environments, it may be necessary to clean more frequently. Failure to clean condenser coil will void condenser warranty. This procedure is for Self-Contained models. The remote condenser coil must also be cleaned at same intervals.

Cleaning Condenser Coil

Disconnect power to the unit. Remove the front grill and vacuum the front surface of the condenser coil. This should be done every two weeks.

> VACUUM FRONT SURFACE OF CONDENSER COIL




MAINTENANCE AND DISASSEMBLY OF CONDENSATE PUMP

Always disconnect power before performing maintenance. Pump and deck may be removed from tank by pushing tabs located on tank sides away from deck while lifting on pump cover.

Periodically inspect the condensate pump tank to assure it is free of accumulated dirt or sludge. **DO NOT** use solvent cleaners. Clean tank with soap and warm water only. Check valve may be removed for cleaning or replacement by unscrewing with a 9/16" wrench.

Clean inlet and outlet piping. Reassemble system and check for correct operation.

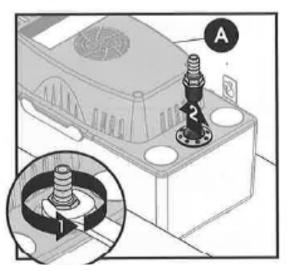

Acrylic Air Deflector Cleaning



NOTICE: Clear acrylic air deflector requires special washing procedures to prevent hazing and yellowing of material.

NEVER USE paper towels (wet or dry) for cleaning or drying and never use a dry towel.

NEVER USE glass cleaner of any kind.

Lightly dust (not wipe) surface with a damp Micro Fiber towel or chamois. The surface can then be washed using a small amount of dishwashing detergent such as Dawn or Joy and lukewarm water. Use a Micro Fiber towel or chamois, applying only light pressure. The cloth or chamois must be kept free of grit by frequently rinsing. Rinse surface with clear water and dry by blotting with a damp Micro Fiber towel or chamois.

Daily Cleaning

The case should be cleaned thoroughly, as described in the weekly cleaning section, before it is used for the first time.

NOTICE:	Avoid splashing or soaking any electrical components with water to prevent electrical damage to the case.
NOTICE:	Shut off lights and power switches and remove all products from case. Allow sufficient time for the unit to reach room temperature before proceeding with cleaning.
NOTICE:	Remove all products from the case before proceeding with cleaning procedure.
NOTICE:	Acrylic air deflector requires special washing procedures to prevent hazing and yellowing of material. Clean as described in "Acrylic Air Deflector Cleaning" section of this manual.

Note: For major spills or foreign material buildup use complete weekly cleaning instructions.

Note: Detergents are not recommended and do not use abrasive cleaners or pads to prevent scratching of surfaces.

- 1. Dip rag in warm soapy water and ring out thoroughly. Wipe complete interior of case and dry with soft dry towel.
- 2. The remaining exterior surface should be wiped down using any ammoniated cleaners or soapy warm water and dried with soft dry towel.
- **3.** IMPORTANT: Cleaning the clear acrylic plastic front air deflector requires special care to prevent hazing and yellowing of material. Clean as described in "Acrylic Air Deflector Cleaning" section of this manual.

Weekly Cleaning

NOTICE:	Avoid splashing or soaking any electrical components with water to prevent electrical damage to the case.
NOTICE:	Shut off lights and power switches and remove all products from case. Allow sufficient time for the unit to reach room temperature before proceeding with cleaning.
NOTICE:	Remove all products from case before proceeding with cleaning procedure.
NOTICE:	Acrylic front air deflector requires special washing procedures to prevent hazing and yellowing of material.

Note: Detergents are not recommended and do not use abrasive cleaners or pads to prevent scratching of surfaces.

- 1. Remove interior shelving from unit as described in the "Shelving Installation and Removal" section of this manual.
- 2. Dip rag in warm soapy water and ring out thoroughly. Clean all shelves and shelf brackets and dry with soft dry towel.
- 3. Lift the display decks up and out of evaporator tub.
- 4. Clean the display deck(s) using warm soapy water and a brush. Rinse thoroughly and allow dry. Wipe off fan shroud assembly (do not rinse or submerge fan motors).
- 5. Clean the entire interior of the case using warm soapy water. Wipe off all soapy water with a damp cloth and allow to dry. (DO NOT use solvents such as Acetone, Benzene, Carbon Tetrachloride, and Lacquer Thinners)
- 6. IMPORTANT: Cleaning the clear acrylic plastic front air deflector requires special care to prevent hazing and yellowing of material. Clean as described in "Acrylic Air Deflector Cleaning" section of this manual.
- 7. Reassemble all components in reverse order.


NOTE: Depending on the amount of usage and spillage of foreign material, some fasteners may have to be removed and parts disassembled to allow proper cleaning of the unit.

<u>Shelves</u>

The RSSL has 14" solid metal shelves as standard. These shelves are installed at the factory.

The shelves are adjustable in 1-5/8" increments. To adjust the shelves, first remove the shelf from the shelf brackets. Remove the shelf bracket from the shelf standard and reposition as desired. If optional shelf lights are installed, it will be necessary to unplug the shelf light cord before repositioning the shelf brackets.

The shelves can be installed horizontally or slanted at a 10° downward angle. To change the shelf slant, first remove the shelf from the shelf support. Lift the shelf supports up at the back until the brackets can be repositioned in the shelf standard slots. See diagram below

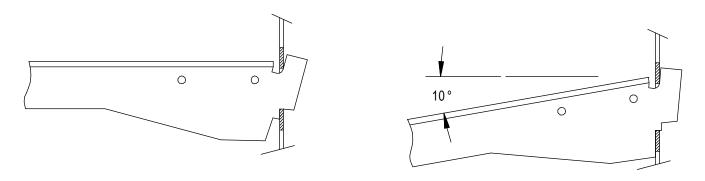

 CAUTION:
 Do not place more than 100 lbs. of product on a RSSL3 or RSSL4 Shelf.

 Do not place more than 80 lbs. of product on a RSSL5 or RSSL6 Shelf.

 Damage to the Shelf Standard may occur if the Shelf is overloaded.

SERVICE INFORMATION

CAUTION RISK OF ELECTRIC SHOCK

DISCONNECT POWER BEFORE SERVICING UNIT Before any service work is performed on the case, make sure all power is disconnected to the case.

To find a service company in your area, please visit our website at <u>www.federalindustries.com</u>. There you can also find self-service tools to help you get the answers you need faster!

For Warranty Service Requests & ALL Technical Support please contact:

- Phone: (800) 356-4206 and choose the Tech Support/Warranty Option
- Email: Service@federalind.com

For Warranty Compressors please contact the Parts Department:

- Phone: (800) 356-4206 and choose the Warranty Parts Option
- Email: Parts@Federalind.com

Partstown

Federal Industries has partnered with Parts Town for ALL Non-Warranty Part Identification, Pricing, Lead Times, Orders & Freight Quotes. Please contact Parts Town directly if you need parts:

- Website: PartsTown.com
- Email: <u>CustomerService@PartsTown.com</u>
- Phone: 833-809-8188

Pre-Service Checklist

You may avoid the cost and inconvenience of an unnecessary service call by first reviewing this checklist of frequently encountered situations that can cause unsatisfactory case performance.



CAUTION: Before servicing case turn off power at the main breaker of fuse box.

Case Does Not Operate

-Check for disconnected power supply.

-Check for tripped breaker or blown fuse.

Case Temperature Too Warm

-Check that top air discharge grill and/or bottom air intake grill are not blocked.

-Check for a blocked or dirty condenser coil.

-Check that there are no outside air disturbances in or around cases. These disturbances can be caused by nearby doors or entrances, overhead ceiling fans or air diffuser vents, direct sunlight, or other heat sources. The location of open refrigerated merchandisers is critical to case performance.

-Make sure that warm product is not being installed inside the case. All product must be pre-chilled prior to loading for proper case performance.

-Check temperature/pressure control for proper settings.

-Check cold air flow. Lack of or no air flow may indicate a blocked evaporator coil or defective evaporator fan motor. Contact a qualified service company if there is no air flow inside case.

Lights Do Not Operate

-Check that light switch located in top light housing is "on".

-Check that all optional shelf light cords are securely plugged into sockets in back panel.

-Check that all light bulbs are properly seated in the light holders.

Overflow of Condensate Evaporator

-Check that drain line is properly located over the water reservoir.

-Check that store conditions do not exceed 75° and/or 55% relative humidity for prolonged periods of time.

-Check that condensate pan heaters are operating. Exterior base of condensate pan should be evenly warm on both long sides of pan.

Special Service Situations

There are rare occasions when the refrigerant charge must be evacuated from a case in order to perform service work. In those situations, Federal Industries recommends that the refrigerant charge be evacuated into a recovery system to prevent the possibility of hydrofluorocarbons (HFC's) from being released into the atmosphere. The release of HFC's into the atmosphere is a source of greenhouse gases.

If moisture or liquid is observed around or under a Federal Industries case, an immediate investigation should be made by qualified personnel to determine the source of the moisture or liquid. The investigation made should determine if the case is malfunctioning or if there is a simple housekeeping problem.

Moisture or liquid around or under a case is a potential slip/fall hazard for persons walking by or working in the general area of the case. Any case malfunction or housekeeping problem that creates a slip/fall hazard around or under a case should be corrected immediately.

SALE & DISPOSAL

Owner Responsibility

If you sell or give away your Federal Industries case, you must make sure that all safety labels and the Installation-Service Manual are included with it. If you need replacement labels or manuals, Federal Industries will provide them free of charge. Contact the Customer Service Department at Federal Industries at (800) 356-4206.

The Customer Service Department at Federal Industries should be contacted at the time of sale or disposal of your case so records may be kept of its new location.

If you sell or give away your Federal Industries case and you evacuate the refrigerant charge before shipment, Federal Industries recommends that the charge be evacuated into a recovery system to reduce the possibility of HFC's from being released into the atmosphere. The release of HFC's into the atmosphere is a source of greenhouse gases.

Model ELECTRICAL	RSSL: RSSL:		RSSL3 RSSL3	-		_378SC _360SC
Power Supply, Volts Frequency Phase Number of Wires	120Volts 60 Hertz 1 Phase 2 + ground		120Volts 60 Hertz 1 Phase 2 + ground		208-240Volts 60 Hertz 1 Phase 2 + ground	
	AMPS	VOLTS	AMPS	VOLTS	AMP	S VOLTS
Compressor						
RLA	9.2	120			4.3	208-240
LRA	58.8	120			31.0	208-240
Condenser Fan Motor	2.0	120			0.6	208-240
Evaporator Fan Motor	0.4	120	0.4	120	0.7	208-240
Lights (Includes Optional Shelf Lights)	0.7	120	0.7	120	0.3	208-240
Condensate Pan Heater	5.0	120			5.0	208-240
Condensate Pump	1.0	120	1.0	120	0.5	208-240

Refer to the rating plate data attached to the rear of the case for Maximum Fuse Size and Minimum Circuit Ampacity.

REFRIGERATION

Self-Contained Models

Refrigeration R449a Charge Self-Contained After 01/01/2020	3 Pounds
Refrigeration R404A Charge Self-Contained Before 01/01/2020	3 Pounds

The self-contained models are shipped from the factory with a completely operational R404A refrigeration system and require no modifications or adjustments upon installation. Case must be installed as per the installation section of this manual to provide proper condensing air cooling.

Self-Contained Refrigeration Operation

The unit temperature is controlled by the Electronic control and timers outlined in the control section of this manual.

Note: The condenser fan runs continuously.

Remote Models

Refrigerant R404A Before 01/01/18	5400 BTU'S @20°F Evap/90° Ambient
Refrigerant R449A After 01/01/18	5400 BTU'S @20°F Evap/90° Ambient

After 01/01/2020

	RSSL478SC RSSL460SC		RSSL478SC RSSL460SC		RSSL478R RSSL460R		RSSL478R RSSL460R	
Power Supply, Volts120 VoltsFrequency60 HertzPhase1 PhaseNumber of Wires2 + ground		208-240 Volts 60 Hertz 1 Phase 2 + ground		120Volts 60 Hertz 1 Phase 2 + ground		208-240 Volts 60 Hertz 1 Phase 2 + ground		
Ļ		/OLTS	AMP	S VOLTS	AMPS	S VOLTS	AMPS	S VOLTS
Compressor RLA LRA Condensar Fan Motor	9.2 58.8 2.0	120 120 120	5.7 31.0 0.7	208-240 208-240 208-240		 		
Evaporator Fan Motor (2) 0.4	120	0.2	208-240	0.4	120	0.2	208-240
Lights (includes optional Shelf lights)	0.7	120	0.3	208-240	0.7	120	0.3	208-240
Condensate Pan Heater	5.0	120	5.0	208-240				
Condensate Pump	1.0	120	.5	208-240	1.0	120	0.5	208-240

Refer to the rating plate data attached to the rear of the case for Maximum Fuse Size and Minimum Circuit Ampacity.

REFRIGERATION

Self-Contained Models

Refrigeration R449a Charge Self Contained	4 Pounds
---	----------

The self-contained models are shipped from the factory with a completely operational R449a refrigeration system and require no modifications or adjustments upon installation. Case must be installed as per the installation section of this manual to provide proper condensing air cooling.

Self-Contained Refrigeration Operation

The unit temperature is controlled by the Electronic control and timers outlined in the control section of this manual.

Note: The condenser fan runs continuously.

Remote Models

Refrigerant R449A After 01/01/20	7500 BTU'S @20°F Evap/90° Ambient

Before 01/01/2020

Model ELECTRICAL	RSSL	478SC	RSSL4	178-R	RSSL4	78SC	
Power Supply, Volts Frequency Phase Number of Wires	60 He 1 Pha	120Volts 60 Hertz 1 Phase 2 + ground		120 Volts 60 Hertz 1 Phase 2 + ground		208-240 Volts 60 Hertz 1 Phase 2 + ground	
	AMPS	VOLTS	AMPS	VOLTS	AMPS	VOLTS	
Compressor							
RLA	12.1	120			5.7	208-240	
LRA	68.0	120			31.0	208-240	
Condensar Fan Motor	2.0	120			0.7	208-240	
Evaporator Fan Motor (2)	0.4ea	120	0.4ea	120	0.2ea.	208-240	
Lights (includes optional Shelf lights)	0.7	120	0.7	120	0.3	208-240	
Condensate Pan Heater	5.0	120			5.0	208-240	
Condensate Pump	1.0	120	1.0	120	0.5	208-240	

Refer to the rating plate data attached to the rear of the case for Maximum Fuse Size and Minimum Circuit Ampacity.

REFRIGERATION

Self-Contained Models

Refrigeration R404A Charge Self Contained	4 Pounds
---	----------

The self-contained models are shipped from the factory with a completely operational R404A refrigeration system and require no modifications or adjustments upon installation. Case must be installed as per the installation section of this manual to provide proper condensing air cooling.

Self-Contained Refrigeration Operation

The unit temperature is controlled by the Electronic control and timers outlined in the control section of this manual.

Note: The condenser fan runs continuously.

Remote Models

Refrigerant R404A Before 01/01/18	7500 BTU'S @20°F Evap/90° Ambient
Refrigerant R449A After 01/01/18	7500 BTU'S @20°F Evap/90° Ambient

After 01/01/2020

Model <u>ELECTRICAL</u> Power Supply, Volts Frequency Phase Number of Wires	RSSL578 RSSL560 208-240 \ 60 Hertz 1 Phase 2 + groun	SC /olts	RSSL578R RSSL560R 208-240 Volts 60 Hertz 1 Phase 2 + ground		
	AMPS	VOLTS	AMPS	VOLTS	
Compressor					
RLA	7.7	208-240			
LRA	54.0	208-240			
Condenser Fan Motor	0.7	208-240			
Evaporator Fan Motor (2)	0.2ea	208-240	0.2ea	208-240	
Lights (includes optional Shelf lights)	0.3	208-240	0.3	208-240	
Condensate Pan Heater	5.0	208-240			
Condensate Pump	0.5	208-240	0.5	208-240	

Refer to the rating plate data attached to the rear of the case for Maximum Fuse Size and Minimum Circuit Ampacity.

REFRIGERATION

Self-Contained Models

Before 11/24/2021, Refrigeration R449a Charge Self-Contained	4 Pounds
After 11/24/2021, Refrigeration R449a Charge Self-Contained	3.25 Pounds

The self-contained models are shipped from the factory with a completely operational R449a refrigeration system and require no modifications or adjustments upon installation. Case must be installed as per the installation section of this manual to provide proper condensing air cooling.

Self-Contained Refrigeration Operation

The unit temperature is controlled by the Electronic control and timers outlined in the control section of this manual.

Note: The condenser fan runs continuously.

Remote Models

Refrigerant R449A After 01/01/18	9000 BTU'S @20°F Evap/90° Ambient

Before 01/01/2020

Model ELECTRICAL	RSSL578	SC	RSSL578R	2
Power Supply, Volts Frequency Phase Number of Wires	208-240 \ 60 Hertz 1 Phase 2 + groun		120 Volts 60 Hertz 1 Phase 2 + ground	
	AMPS	VOLTS	AMPS	VOLTS
Compressor RLA LRA	7.7 54.0	208-240 208-240		
Condenser Fan Motor	0.7	208-240		
Evaporator Fan Motor (2)	0.2ea	208-240	0.4ea	120
Lights (includes optional Shelf lights)	0.3	208-240	0.7	120
Condensate Pan Heater	5.0	208-240	7	120
Condensate Pump	0.5	208-240	1.0	120

Refer to the rating plate data attached to the rear of the case for Maximum Fuse Size and Minimum Circuit Ampacity.

REFRIGERATION

Self-Contained Models

Refrigeration R404A Charge Self Contained4 Pounds

The self-contained models are shipped from the factory with a completely operational R404A refrigeration system and require no modifications or adjustments upon installation. Case must be installed as per the installation section of this manual to provide proper condensing air cooling.

Self-Contained Refrigeration Operation

The unit temperature is controlled by the Electronic control and timers outlined in the control section of this manual.

Note: The condenser fan runs continuously.

Remote Models

Refrigerant R404A Before 01/01/18	9000 BTU'S @20°F Evap/90° Ambient
Refrigerant R449A After 01/01/18	9000 BTU'S @20°F Evap/90° Ambient

After 01/01/2020

Model <u>ELECTRICAL</u> Power Supply, Volts Frequency Phase Number of Wires	RSSL678 RSSL660 208-240 \ 60 Hertz 1 Phase 2 + groun	SC /olts	RSSL678F RSSL660F 208-240 V 60 Hertz 1 Phase 2 + ground	R olts
	AMPS	VOLTS	AMPS	VOLTS
Compressor RLA LRA	7.7 54.0	208-240 208-240		
Condensar Fan Motor	0.7	208-240		
Evaporator Fan Motor (3) Lights (includes optional Shelf lights)	0.2ea 0.3	208-240 208-240	0.2ea 0.3	208-240 208-240
Condensate Pan Heater Condensate Pump	5.0 0.5	208-240 208-240	0.5	 208-240

Refer to the rating plate data attached to the rear of the case for Maximum Fuse Size and Minimum Circuit Ampacity.

REFRIGERATION

Self-Contained Models

Before 11/24/2021, Refrigeration R449a Charge Self-Contained	4.25 Pounds
After 11/24/2021, Refrigeration R449a Charge Self-Contained	3.25 Pounds

The self-contained models are shipped from the factory with a completely operational R449a refrigeration system and require no modifications or adjustments upon installation. Case must be installed as per the installation section of this manual to provide proper condensing air cooling.

Self-Contained Refrigeration Operation

The unit temperature is controlled by the Electronic control and timers outlined in the control section of this manual.

Note: The condenser fan runs continuously.

Remote Models

Refrigerant R449A After 01/01/18	7500 BTU'S @20°F Evap/90° Ambient

Before 01/01/2020

208-240 V 60 Hertz 1 Phase	/olts	RSSL678R 120 Volts 60 Hertz 1 Phase 2 + ground	
AMPS	VOLTS	AMPS	VOLTS
7.7	208-240		
54.0	208-240		
0.7	208-240		
0.2ea	208-240	0.4ea	120
0.3	208-240	0.7	120
5.0	208-240	10	120
0.5	208-240	1.0	120
	208-240 V 60 Hertz 1 Phase 2 + groun AMPS 7.7 54.0 0.7 0.2ea 0.3 5.0	1 Phase 2 + groundAMPSVOLTS7.7208-24054.0208-2400.7208-2400.2ea208-2400.3208-2405.0208-240	208-240 Volts 120 Volts 60 Hertz 60 Hertz 1 Phase 1 Phase 2 + ground 2 + ground AMPS VOLTS AMPS 7.7 208-240 54.0 208-240 0.7 208-240 0.2ea 208-240 0.4ea 0.3 208-240 0.7 5.0 208-240 10

Refer to the rating plate data attached to the rear of the case for Maximum Fuse Size and Minimum Circuit Ampacity.

REFRIGERATION

Self-Contained Models

Refrigeration R404A Charge Self Contained	4.25 Pounds
---	-------------

The self-contained models are shipped from the factory with a completely operational R404A refrigeration system and require no modifications or adjustments upon installation. Case must be installed as per the installation section of this manual to provide proper condensing air cooling.

Self-Contained Refrigeration Operation

The unit temperature is controlled by the Electronic control and timers outlined in the control section of this manual.

Note: The condenser fan runs continuously.

Remote Models

Refrigerant R404A Before 01/01/18	7500 BTU'S @20°F Evap/90° Ambient
Refrigerant R449A After 01/01/18	7500 BTU'S @20°F Evap/90° Ambient

ELECTRICAL DATA NSSL378, NSSL478, NSSL578, NSSL678

Model ELECTRICAL	NSSL ALL or	NSSL ALL
Power Supply, Volts Frequency Phase Number of Wires	120Volts or 60 Hertz 1 Phase 2 + ground	208-240Volts 60 Hertz 1 Phase 2 + ground
	AMPS VOLTS	AMPS VOLTS
Lights (Includes Optional Shelf Lights)	0.7 120	0.3 208-240

Refer to the rating plate data attached to the rear of the case for Maximum Fuse Size and Minimum Circuit Ampacity.

REPLACEMENT PARTS MODEL RSSL378, RSSL360, NSSL378

After 01/01/2020

Part Description	RSSL378SC NSSL378	RSSL378R	RSSL378SC
	RSSL360SC	RSSL360R	RSSL360SC
Refrigeration System	Part # 120V	Part #120V	<u>208-240V</u>
Condensing Unit (Tecumseh RSSL378 Only)	30-20461		30-20512
Condensing Unit (Embraco RSSL360/378)	30-21316		
Compressor (Tecumseh Replacement RSSL378SC)	30-20679		30-18052
Evaporator Coil	33-13283	33-13283	33-13283
Expansion Valve (Self-Contained R449a)	32-21172		32-21172
Expansion Valve Electronic (Remote R449a)		32-21228	
Evaporator Fan Motor	41-11628	41-11628	41-15925
Evaporator Fan Blade Filter Drier	72-32507	72-32507	72-32507
Dual Pressure Control	32-12626 32-51009		32-12626 32-51009
Solenoid Valve	52-51009	32-14325	52-51009
Coil Solenoid Valve		41-14324	
Electronic Expansion Valve Control (Remote)		32-21223	
Temperature Sensor (Remote)		32-21223	
Pressure Transducer (Remote)		32-21225	
Electrical Components		02 21220	
Sensor Defrost	32-19094	32-19094	32-19094
Sensor Temp	32-19866	32-19866	32-19866
Temperature Control (carel)	32-19864-1	32-19864-1	32-19865-1
Optional Temperature Control (Dixell) RSSL360	32-21341-20	32-21341-20	
Condensate PTC Heater	40-19331	40-19331	40-19392
Light Led	42-20871-25C35	42-20871-25C35	42-20871-25C35
Power Supply Led 24V.	39-2098 6	39-20986	39-20986
Light Switch (On/Off)	41-11066	41-11066	41-11066
Heater Wire Assembly	43-14892	43-14892	43-19467
Condensate Pan	SA5406-1	SA5406-1	SA5406-2
Condensate Pump	47-15686	47-15686	47-15687
Cord & Plug RSSL378	43-30818		43-19090
Cord & Plug NSSL378	<u>43-11302</u>		
Miscellaneous Components			
Price Tag Molding	<u>W11329-21</u>	W11329-21	W11329-21
Clip Led Light	<u>67-20869</u>	67-20869	67-20869
Shelf Bracket, Left Side 14" S/S	<u>M19850-L</u>	M19850-L	M19850-L
Shelf Bracket, Right Side 14" S/S	M19850-R	M19850-R	M19850-R
Shelf 14" S/S	<u>M19851-1</u>	M19851-1	M19851-1
Light deflector S/S	<u>M20881-1C</u> 32-13662	M20881-1C 32-13662	M20881-1C
Thermometer Air Deflector			32-13662 15-19336-3
End Glass Clear 78"Tall Case	15-19336-3 50-19495	15-19336-3 50-19495	50-19495
End Glass Reflective 78" Tall Case	<u>50-19495</u> 50-19495-1	50-19495	50-19495-1
End Glass Clear 78"Tall Case	<u>50-19495-1</u> 50-19532	50-19495-1	50-19532
End Glass Reflective 78" Tall Case	50-19532-1	50-19532-1	50-19532-1
Optional Parts	30-13332-1	30-13332-1	50-15552-1
	42 20062 214	42 20062 200	42 20062 2004
White Shelf Lamp Cord White Shelf Lamp Socket/Receptacle	<u>43-20862-3W</u>	43-20862-3W	43-20862-3W
White Shelf Lamp Socket/Receptacle Black Shelf Lamp Cord	<u>43-20996-W</u>	43-20996-W	43-20996-W
Black Shelf Lamp Cord Black Shelf Lamp Socket/Receptacle	<u>43-20862-3B</u> 43-20996-B	43-20862-3B 43-20996-B	43-20862-3B 43-20996-B
Energy Savings Night Curtain	<u>43-20990-Б</u> 65-19300	43-20990-D 65-19300	43-20990-D 65-19300
Security Night Cover	701-918	701-918	701-918
Parts for the NSSI 378 are highlighted in hold and ur	nderlined		

Parts for the NSSL378 are highlighted in bold and underlined

REPLACEMENT PARTS MODEL RSSL378, NSSL378

Part Description Refrigeration System	RSSL378SC Part # 120V	RSSL378R <u>Part #120V</u>	RSSL378SC <u>208-240V</u>
Condensing Unit (Self-Contained Only) Compressor (Replacement) Evaporator Coil Expansion Valve Evaporator Fan Motor Evaporator Fan Blade Filter Drier Dual Pressure Control Solenoid Valve Coil Solenoid Valve	30-20461 30-20679 33-13283 32-19419 41-11628 72-32507 32-12626 32-51009	33-13283 32-20877 41-11628 72-32507 32-14325 41-14324	30-20512 30-18052 33-13283 32-19419 41-15925 72-32507 32-12626 32-51009
Electrical Components			
Sensor Defrost Sensor Temp Temperature Control Condensate PTC Heater Light Led Power Supply Led 24V. Light Switch (On/Off) Heater Wire Assembly Condensate Pan Condensate Pump Cord & Plug RSSL378 Cord & Plug NSSL378	32-19094 32-19866 32-19864-1 40-19331 42-20871-25C35 39-20986 41-11066 43-14892 SA5406-1 47-15686 43-30818 43-11302	32-19094 32-19866 32-19864-1 40-19331 42-20871-25C35 39-20986 41-11066 43-14892 SA5406-1 47-15686 	32-19094 32-19866 32-19865-1 40-19392 42-20871-25C35 39-20986 41-11066 43-19467 SA5406-2 47-15687 43-19090
Miscellaneous Components			
Price Tag Molding Clip Led Light Shelf Bracket, Left Side 14" S/S Shelf Bracket, Right Side 14" S/S Shelf 14" S/S Light deflector S/S Thermometer Air Deflector End Glass Clear 78"Tall Case End Glass Clear 78"Tall Case End Glass Clear 78"Tall Case End Glass Reflective 78" Tall Case End Glass Reflective 78" Tall Case	W11329-21 67-20869 M19850-L M19850-R M19851-1 M20881-1C 32-13662 15-19336-3 50-19495 50-19495-1 50-19532 50-19532-1	W11329-21 67-20869 M19850-L M19850-R M19851-1 M20881-1C 32-13662 15-19336-3 50-19495 50-19495-1 50-19532 50-19532-1	W11329-21 67-20869 M19850-L M19850-R M19851-1 M20881-1C 32-13662 15-19336-3 50-19495 50-19495-1 50-19532 50-19532-1
White Shelf Lamp Cord	43-20862-3W	43-20862-3W	43-20862-3W
White Shelf Lamp Socket/Receptacle Black Shelf Lamp Cord Black Shelf Lamp Socket/Receptacle Energy Savings Night Curtain Security Night Cover	43-20996-W 43-20862-3B 43-20996-B 65-19300 701-918	43-20996-W 43-20862-3B 43-20996-B 65-19300 701-918	43-20996-W 43-20862-3B 43-20996-B 65-19300 701-918

REPLACEMENT PARTS MODEL RSSL478, RSSL460, NSSL478

After 01/01/2020

Part Decembrian					
Part Description	NSSL478	RSSL478SC RSSL460SC		RSSL478R RSSL460R	RSSL478SC RSSL460SC
Refrigeration System	<u>120V</u>	<u>120V</u>	<u>120V</u>	<u>208-240V</u>	<u>208-240V</u>
Condensing Unit (Self-Contained RSSL478 Or Condensing Unit (Self-Contained RSSL460 Or Compressor (Replacement RSSL478 240V Or	nly)	 30-21316			30-17888 30-18052
Evaporator Coil Expansion Valve (Self-Contained R449a)		33-11541 32-20887 	33-11541 32-21228	33-11541 32-21228	33-11541 32-20887
Expansion Valve Electronic (Remote R449a) Evaporator Fan Motor		41-11628	41-11628	41-15925	41-15925
Evaporator Fan Blade Filter Drier Dual Pressure Control		72-12254 32-12626 	72-12254 	72-13316	72-13316 32-12626 32-51009
Solenoid Valve Coil Solenoid Valve			32-14325 41-14324	32-14325 41-14324	
Electronic Expansion Valve Control (Remote) Temperature Sensor (Remote)			32-21223 32-21224	32-21223 32-21224	
Pressure Transducer (Remote)			32-21225	32-21225	
Electrical Components					
Sensor Defrost Sensor Temp		32-19094 32-19866	32-19094 32-19866	32-19094 32-19866	32-19094 32-19866
Temperature Control (Carel) Optional Temperature Control (Dixell)		32-19864-20 32-21341-20	32-19864-20 32-21341-20	32-19865-1	32-19865-1
Condensate PTC Heater		40-19331			40-19392
Light Led 42 Power Supply Led 24V.	-20871-38C35 39-20986	42-20871-38C35 39-20986	42-20871-38C35 39-20986	42-20871-38C35 4 39-20986	2-20871-38C35 39-20986
Light Switch (On/Off)	41-11066	41-11066	41-11066	41-11066	41-11066
Heater Wire Assembly		43-14891	43-14891	43-15926	43-15926
Condensate Pan Condensate Pump		 47-15686	47-15686	 47-15687	SA5406-2 47-15687
Cord & Plug	43-11302	43-30818			43-19090
Miscellaneous Components					
Price Tag Molding	W11329-22	W11329-22	W11329-22	W11329-22	W11329-22
Clip Led Light Shelf Bracket, Left Side S/S	67-20869 M19850-L	67-20869 M19850-L	67-20869 M19850-L	67-20869 M19850-L	67-20869 M19850-L
Shelf Bracket, Right Side S/S	M19850-R	M19850-R	M19850-R	M19850-R	M19850-R
Shelf 14" S/.S	M19851-2	M19851-2	M19851-2	M19851-2	M19851-2
Light deflector S/S	M20881-C	M20881-C	M20881-C	M20881-C	M20881-C
Thermometer Air Deflector		32-13662 15-19336-6	32-13662 15-19336-6	32-13662 15-19336-6	32-13662 15-19336-6
End Glass Clear 60"		50-19532	50-19532	50-19532	50-19532
End Glass Reflective 60"		50-19532-1	50-19532-1	50-19532-1	50-19532-1
End Glass Clear 78"	50-19495	50-19495	50-19495	50-19495	50-19495
End Glass Reflective 78"	50-19495-1	50-19532-1	50-19532-1	50-19495-1	50-19495-1
<u>Optional Parts</u>					
White Shelf Lamp Cord White Shelf Lamp Socket/Receptacle Black Shelf Lamp Cord Black Shelf Lamp Socket/Receptacle Energy Savings Night Curtain Security Night Cover	43-20862-3W 43-20996-W 43-20862-3B 43-20996-B 	43-20862-3W 43-20996-W 43-20862-3B 43-20996-B 65-19460 703-918	43-20862-3W 43-20996-W 43-20862-3B 43-20996-B 65-19460 702-918	43-20862-3W 43-20996-W 43-20862-3B 43-20996-B 65-19460 703-918	43-20862-3W 43-20996-W 43-20862-3B 43-20996-B 65-19460 703-918

REPLACEMENT PARTS MODEL RSSL478, NSSL478

Part Description	RSSL478SC NSSL478	RSSL478R	RSSL478SC
Refrigeration System	<u>120V</u>	<u>120V</u>	<u>208-240V</u>
Condensing Unit (Self-Contained Only) Compressor (Replacement) Evaporator Coil Expansion Valve (Before 01/01/18) Expansion Valve (After 01/01/18) Evaporator Fan Motor Evaporator Fan Blade Filter Drier Dual Pressure Control Solenoid Valve Coil Solenoid Valve	30-20462 30-18051 33-11541 32-19419 32-19419 41-11628 72-13316 32-12626 32-51009	33-11541 32-19419 32-20877 41-11628 72-13316 	30-17888 30-18052 33-11541 32-19419 32-19419 41-11628 72-13316 32-12626 32-51009
Electrical Components			
Sensor Defrost Sensor Temp Temperature Control Condensate PTC Heater Light Led Power Supply Led 24V. Light Switch (On/Off) Heater Wire Assembly Condensate Pan Condensate Pump Cord & Plug RSSL478 Cord & Plug NSSL478	32-19094 32-19866 32-19864-1 40-19331 42-20871-38C35 39-20986 41-11066 43-14891 SA5406-1 47-15686 43-30818 43-11302	32-19094 32-19866 32-19864-1 40-19331 42-20871-38C35 39-20986 41-11066 43-14891 SA5406-1 47-15686 	32-19094 32-19866 32-19865-1 40-19392 42-20871-38C35 39-20986 41-11066 43-15926 SA5406-2 47-15687 43-19090
Miscellaneous Components			
Price Tag Molding Clip Led Light Shelf Bracket, Left Side S/S Shelf Bracket, Right Side S/S Shelf 14" S/S Light deflector S/S Thermometer Air Deflector End Glass Clear 78" Tall Case End Glass Reflective 78" Tall Case End Glass Clear 60" Tall Case End Glass Reflective 60" Tall Case	W11329-22 67-20869 M19850-L M19850-R M19851-2 M20881-C 32-13662 15-19336-6 50-19495 50-19495-1 50-19532 50-19532-1	W11329-22 67-20869 M19850-L M19850-R M19851-2 M20881-C 32-13662 15-19336-6 50-19495 50-19495-1 50-19532 50-19532-1	W11329-22 67-20869 M19850-L M19850-R M19851-2 M20881-C 32-13662 15-19336-6 50-19495 50-19495-1 50-19532 50-19532-1
Optional Parts			
White Shelf Lamp Cord White Shelf Lamp Socket/Receptacle Black Shelf Lamp Cord Black Shelf Lamp Socket/Receptacle Energy Savings Night Curtain Security Night Cover	43-20862-3W 43-20996-W 43-20862-3B 43-20996-B 65-19460 703-918	43-20862-3W 43-20996-W 43-20862-3B 43-20996-B 65-19460 703-918	43-20862-3W 43-20996-W 43-20862-3B 43-20996-B 65-19460 703-918

REPLACEMENT PARTS MODEL RSSL578, RSSL560, NSSL578

After 01/01/2020

Part Description	NSSL578	RSSL578SC RSSL560SC	RSSL578R RSSL560R
Refrigeration System	<u>120V</u>	<u>208-240V</u>	<u>208-240V</u>
Condensing Unit (Self-Contained Only, Before 11/24/2021)		30-21493	
Compressor (Replacement, Before 11/24/2021)		30-18054	
Condensing Unit (Self-Contained Only, After 11/24/2021)		30-21392	
Compressor (Replacement, After 11/24/2021)		30-21515	
Evaporator Coil		33-18024	33-18024
Expansion Valve (Self-Contained R449a)		32-20877	
Expansion Valve Electronic (Remote R449a)			32-21228
Evaporator Fan Motor 240V		41-15925	41-15925
Evaporator Fan Blade Filter Drier		72-32507 32-12626	72-32507
Dual Pressure Control		32-51009	
Solenoid Valve			32-14325
Coil Solenoid Valve			41-14324
Electronic Expansion Valve Control (Remote)			32-21223
Temperature Sensor (Remote)			32-21224
Pressure Transducer (Remote)			32-21225
Electrical Components			
Sensor Defrost		32-19094	32-19094
Sensor Temp.		32-19866	32-19866
Temperature Control		32-19865-1	32-19864-1
Condensate PTC Heater		40-19392	40-19331
Light Led		42-20871-48C35	
Power Supply Led 24V.	39-20986	39-20986	39-20986
Light Switch (On/Off)	41-11066	41-11066	41-11066
Heater Wire Assembly		43-20356	43-18043
Condensate Pan		SA5406-2 47-15687	SA5406-12 47-15686
Condensate Pump Cord & Plug RSSL578		43-19090	47-15060
Cord & Plug NSSL578	43-11302	43-19090	
Miscellaneous Components	40 11002		
Price Tag Molding	W11329-23	W11329-23	W11329-23
Clip Led Light	67-20869	67-20869	67-20869
Shelf Bracket, Left Side S/S	M19850-L	M19850-L	M19850-L
Shelf Bracket, Right Side S/S	M19850-R	M19850-R	M19850-R
Shelf 14" S./S	M19851-3	M19851-3	M19851-3
Light deflector S/S	M20881-2C	M20881-2C	M20881-2C
Thermometer		32-13662	32-13662
Air Deflector		15-19336-9	15-19336-9
End Glass Clear 78"Tall Case	50-19495	50-19495	50-19495
End Glass Reflective 78" Tall Case	50-19495-1	50-19495-1	50-19495-1
End Glass Clear 78"Tall Case	50-19532	50-19532	50-19532
End Glass Reflective 78" Tall Case	50-19532-1	50-19532-1	50-19532-1
Optional Parts			
White Shelf Lamp Cord	43-20862-3W	43-20862-3W	43-20862-3W
White Shelf Lamp Socket/Receptacle	43-20996-W	43-20996-W	43-20996-W
Black Shelf Lamp Cord	43-20862-3B	43-20862-3B	43-20862-3B
Black Shelf Lamp Socket/Receptacle	43-20996-B	43-20996-B	43-20996-B
. Energy Saving Night Curtain		65-19458	65-19458
Security Night Cover	705-918	705-918	705-918

REPLACEMENT PARTS MODEL RSSL578, NSSL578

Part Description Refrigeration System	RSSL578SC <u>208-240V</u>	RSSL578R <u>PART# 120V</u>
Condensing Unit (Self-Contained Only) Compressor (Replacement) Evaporator Coil Expansion Valve Evaporator Fan Motor Evaporator Fan Blade Filter Drier Dual Pressure Control Solenoid Valve Coil Solenoid Valve	30-17889 30-18054 33-18024 32-19416 41-15925 72-32507 32-12626 32-51009	 33-18024 32-20876 41-11628 72-32507 32-14325 41-14324
Electrical Components		
Sensor Defrost Sensor Temp. Temperature Control Condensate PTC Heater Light Led Power Supply Led 24V. Light Switch (On/Off) Heater Wire Assembly Condensate Pan Condensate Pump Cord & Plug RSSL578 Cord & Plug NSSL578	32-19094 32-19866 32-19865-1 40-19392 42-20871-48C35 39-20986 41-11066 43-20356 SA5406-2 47-15687 43-19090	32-19094 32-19866 32-19864-1 40-19331 42-20871-48C35 39-20986 41-11066 43-18043 SA5406-12 47-15686
Miscellaneous Components		
Price Tag Molding Clip Led Light Shelf Bracket, Left Side S/S Shelf Bracket, Right Side S/S Shelf 14" S./S Light deflector S/S Thermometer Air Deflector End Glass Clear 78"Tall Case End Glass Reflective 78" Tall Case End Glass Reflective 78" Tall Case	W11329-23 67-20869 M19850-L M19850-R M19851-3 M20881-2C 32-13662 15-19336-9 50-19495 50-19495-1 50-19532 50-19532-1	W11329-23 67-20869 M19850-L M19850-R M19851-3 M20881-2C 32-13662 15-19336-9 50-19495 50-19495-1 50-19532 50-19532-1
Optional Parts		
White Shelf Lamp Cord White Shelf Lamp Socket/Receptacle Black Shelf Lamp Cord Black Shelf Lamp Socket/Receptacle . Energy Saving Night Curtain Security Night Cover	43-20862-3W 43-20996-W 43-20862-3B 43-20996-B 65-19458 705-918	43-20862-3W 43-20996-W 43-20862-3B 43-20996-B 65-19458 705-918

REPLACEMENT PARTS MODEL RSSL678, RSSL660, NSSL678

After 01/01/2020

Part Description	NSSL678	RSSL678SC RSSL660SC	RSSL678R RSSL660R
Refrigeration System	<u>120V</u>	<u>208-240V</u>	208-240V
Condensing Unit (Self-Contained Only, Before 11/24/2021) Compressor (Replacement, Before 11/24/2021) Condensing Unit (Self-Contained Only, After 11/24/2021) Compressor (Replacement, After 11/24/2021) Evaporator Coil Expansion Valve (Self-Contained) Expansion Valve Electronic (Remote R449A) Evaporator Fan Motor Evaporator Fan Blade Filter Drier Dual Pressure Control Solenoid Valve Coil Solenoid Valve Electronic Expansion Valve Control (Remote) Temperature Sensor (Remote) Pressure Transducer (Remote)		30-21493 30-18054 30-21392 30-21515 33-11542 32-20877 	33-11542 32-21226 41-15925 72-13316 32-14325 41-14324 32-21223 32-21224 32-21225
Electrical Components			
Sensor Defrost Sensor Temp. Temperature Control Condensate PTC Heater Light Led top Light Led shelf Power Supply Led 24V. Light Switch (On/Off) Heater Wire Assembly Condensate Pan Condensate Pan Condensate Pump Cord & Plug RSSL678 Cord & Plug NSSL678		32-19094 32-19866 32-19865-1 40-19392 42-20871-60C35 42-20871-25C35 39-20986 41-11066 43-19113 SA5406-2 SA5406-3 47-15687 43-19090	
Miscellaneous Components			
Price Tag Molding Clip Led Light Shelf Bracket, Left Side S/S Shelf Bracket, Right Side S/S Shelf 14" S/S Light deflector S/S Thermometer Air Deflector End Glass Clear 78"Tall Case End Glass Reflective 78" Tall Case End Glass Clear 78"Tall Case End Glass Reflective 78" Tall Case	W11329-24 67-20869 M19850-L M19850-R M19851-4 M20881-3C 50-19495 50-19495-1 50-19532 50-19532-1	W11329-24 67-20869 M19850-L M19850-R M19851-4 M20881-3C 32-13662 15-19336-12 50-19495 50-19495-1 50-19532 50-19532-1	W11329-24 67-20869 M19850-L M19850-R M19851-4 M20881-3C 32-13662 15-19336-12 50-19495 50-19495-1 50-19532 50-19532-1
Optional Parts	00 10002 1	00 10002 1	00 10002 1
White Shelf Lamp Cord White Shelf Lamp Socket/Receptacle Black Shelf Lamp Cord Black Shelf Lamp Socket/Receptacle Energy Saving Night Curtain Security Night Cover	43-20862-3W 43-20996-W 43-20862-3B 43-20996-B 707-918	43-20862-3W 43-20996-W 43-20862-3B 43-20996-B 65-19300 707-918	43-20862-3W 43-20996-W 43-20862-3B 43-20996-B 65-19300 707-918


REPLACEMENT PARTS MODEL RSSL678, NSSL678


Part Description Refrigeration System	RSSL678SC 208-240V	RSSL678R <u>PART# 120V</u>
Condensing Unit (Self-Contained Only) Compressor (Replacement) Evaporator Coil Expansion Valve Evaporator Fan Motor Evaporator Fan Blade Filter Drier Dual Pressure Control Solenoid Valve Coil Solenoid Valve	30-17889 30-18054 33-11542 32-19416 41-15925 72-13316 32-12626 32-51009	 33-11542 32-20876 41-11628 72-13316 32-14325 41-14324
Electrical Components		
Sensor Defrost Sensor Temp. Temperature Control Condensate PTC Heater <u>Light Led top</u> <u>Light Led shelf</u> <u>Power Supply Led 24V</u> . <u>Light Switch (On/Off)</u> Heater Wire Assembly Condensate Pan Condensate Pan Condensate Pan Condensate Pump Cord & Plug RSSL678 <u>Cord & Plug NSSL678</u>	32-19094 32-19866 32-19865-1 40-19392 42-20871-60C35 42-20871-25C35 39-20986 41-11066 43-19113 SA5406-2 SA5406-3 47-15687 43-19090	32-19094 32-19866 32-19864-1 40-19331 42-20871-60C35 42-20871-25C35 39-20986 41-11066 43-14893 SA5406-12 SA5406-13 47-15686 43-11302
Miscellaneous Components		
Price Tag Molding Clip Led Light Shelf Bracket, Left Side S/S Shelf Bracket, Right Side S/S Shelf 14" S/S Light deflector S/S Thermometer Air Deflector End Glass Clear 78"Tall Case End Glass Reflective 78" Tall Case End Glass Reflective 78" Tall Case End Glass Reflective 78" Tall Case	W11329-24 67-20869 M19850-L M19850-R M19851-4 M20881-3C 32-13662 15-19336-12 50-19495 50-19495-1 50-19532 50-19532-1	W11329-24 67-20869 M19850-L M19850-R M19851-4 M20881-3C 32-13662 15-19336-12 50-19495 50-19495-1 50-19532 50-19532-1
Optional Parts		
White Shelf Lamp Cord White Shelf Lamp Socket/Receptacle Black Shelf Lamp Cord Black Shelf Lamp Socket/Receptacle Energy Saving Night Curtain Security Night Cover	43-20862-3W 43-20996-W 43-20862-3B 43-20996-B 65-19300 707-918	43-20862-3W 43-20996-W 43-20862-3B 43-20996-B 65-19300 707-918

RSSL/NSSL DISPLAY AREA AND VOLUME


	RSSL378/360	RSSL478/460	RSSL578/560	RSSL678/660
CUBIC FT. PER SHELF	2.2	2.9	3.7	4.5
CUBIC FT. DISPLAY DECK	2.7	3.6	4.6	5.5
TOTAL CUBIC FT.	11.5/7.1	15.2/9.4	19.4/12	23.5/14.5
SQUARE INCHES PER SHELF	468.0	622.0	790.0	958.0
SQUARE INCHES DISPLAY DECK	418.0	555.0	705.0	855.0
TOTAL SQUARE INCHES	2290/1354	3043/1799	3865/2285	4687/2771
SHELF WIDTH " L "	33.44	44.44	56.44	68.44

NOTE: CUBIC FEET IS MEASURED WITH 2" CLEARANCE BETWEEN SHELVES

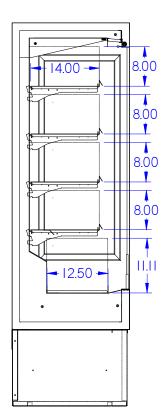


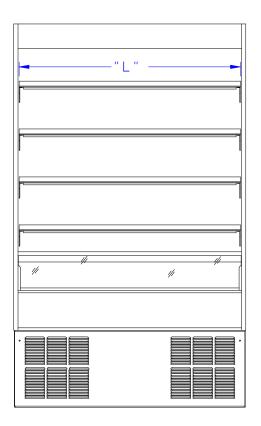


WIRING DIAGRAM 208-240V - SELF CONTAINED RSSL378SC, RSSL478SC, RSSL578SC & RSSL678SC RSSL360SC, RSSL460SC, RSSL560SC & RSSL660SC

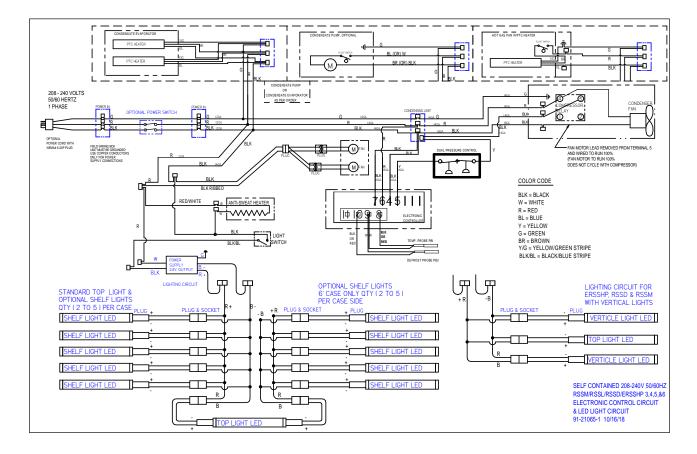


WIRING DIAGRAM 208-240V - REMOTE RSSL378R, RSSL478R, RSSL578R & RSSL678R RSSL360R, RSSL460R, RSSL560R & RSSL660R

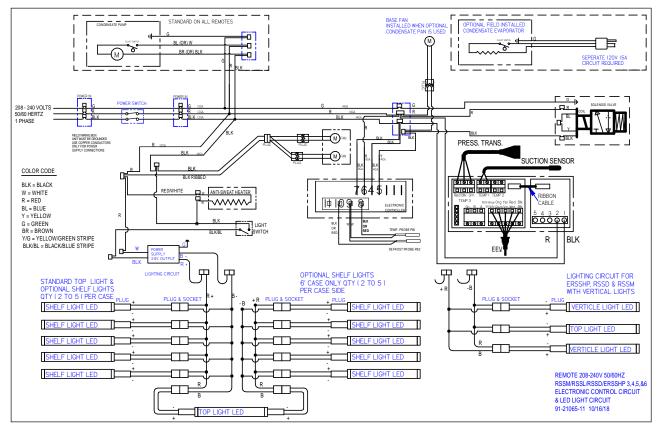


WIRING DIAGRAM 120V - SELF CONTAINED RSSL378SC, RSSL360SC & RSSL460SC

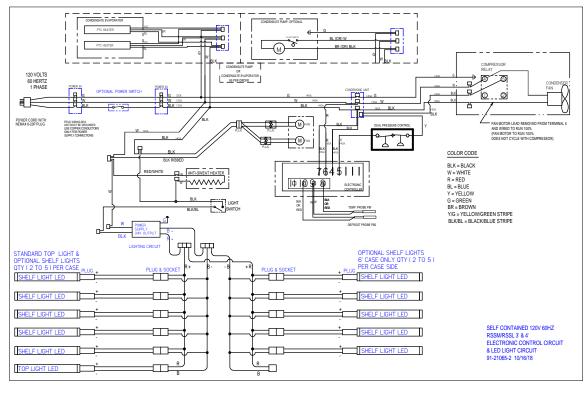

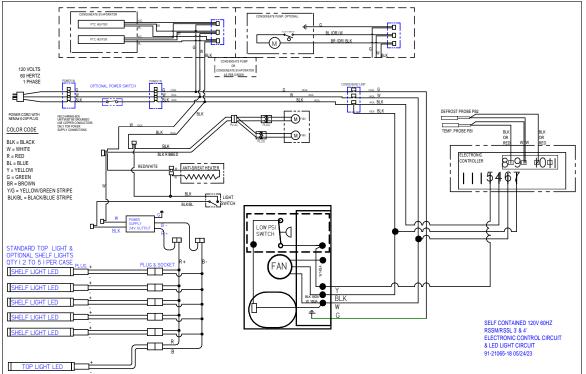


WIRING DIAGRAM 120V - REMOTE RSSL378R, RSSL360R , RSSL460R, RSSL478R

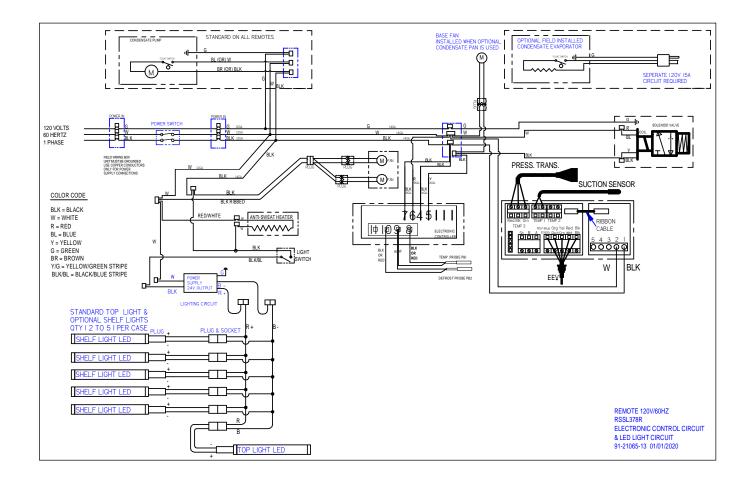


WIRING DIAGRAM 120V NSSL378, NSSL478, NSSL578, & NSSL678

ALL

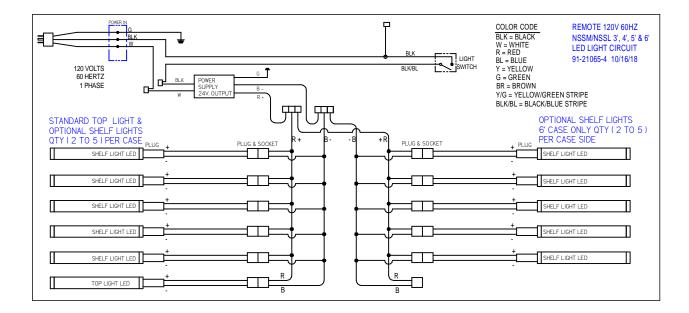


WIRING DIAGRAM 208-240V - SELF CONTAINED RSSL378SC, RSSL478SC, RSSL578SC & RSSL678SC

BEFORE 01/01/2020

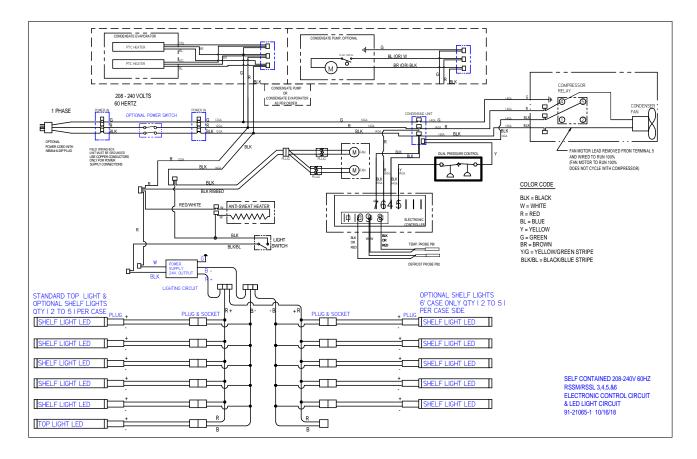


WIRING DIAGRAM 120V - SELF CONTAINED RSSL378SC, RSSL478SC

BEFORE 01/01/2020

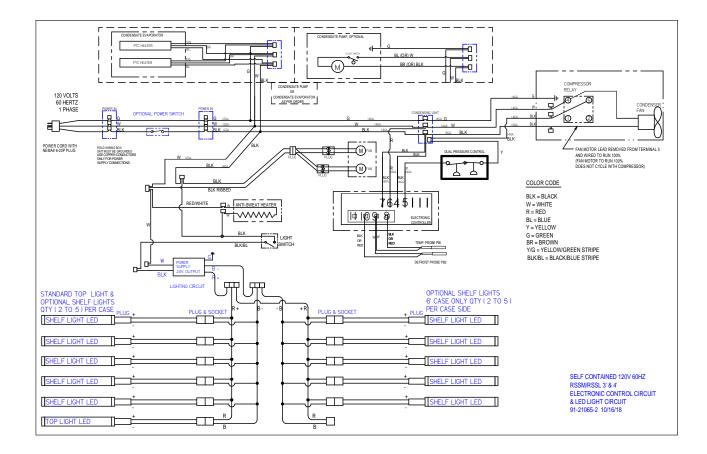

WIRING DIAGRAM 120V - REMOTE RSSL378R, RSSL478R, RSSL578R, & RSSL678R

BEFORE 01/01/2020

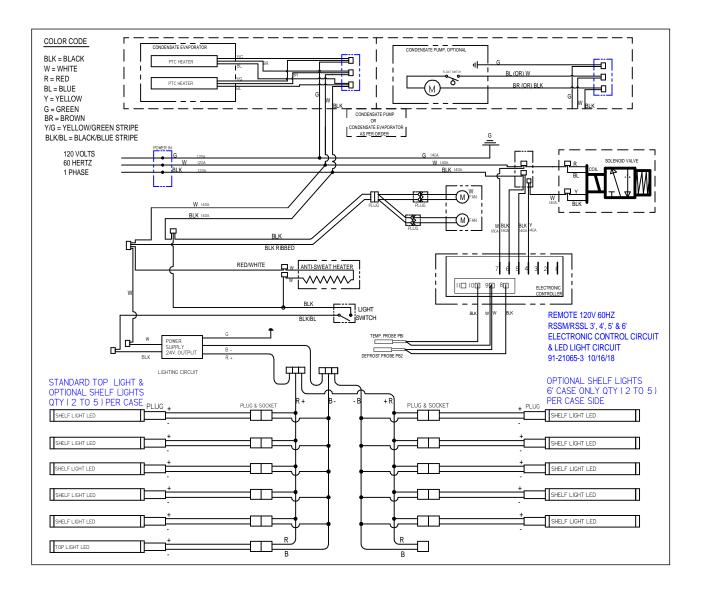

California Residents Only. M WARNING This product can expose you to chemicals including chromium which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to <u>www.P65Warnings.ca.gov</u>

REV	CHANGE RECORD	APP'D	DATE	ECN#
В	LED LIGHT UPDATE	BJW	11/01/18	3420
С	USER CONTROL, WARRANTY/SERVICE/PARTS UPDATE	BJW	05/03/19	
D	CHANGED R449A TXV	BJW	06/13/19	3497
E	UPDATED DUAL PRESSURE CONTROL INFO	ADC	8/6/19	3506
F	UPDATED FOR R449a REFRIGERANT SC & REMOTE	BJW	1/1/2020	3569
G	UPDATED CUT-IN & CUT-OUT SET POINTS PAGES 11 & 12	BJW	02/17/20	
Н	ADDED RSSL360, RSSL460, RSSL560, RSSL660	BJW	10/21/21	3732
I	ADDED BEFORE & AFTER DATES FOR C.U. ON 5' & 6', C.U. BEFORE 1/1/2022 30-17889, AFTER 1/1/2022 30-21493	ADC	11/9/2021	3742
J	ADDED BEFORE & AFTER DATES FOR REFRIG CHARGE ON 5' & 6' NEW AMOUNT 3.25LBS, CHG BEFORE & AFTER DATES FOR C.U. CHG ON 5' & 6' TO 11/24/2021, C.U. 30-21493 WAS 30-17889 BEFORE 11/24/2021, ADDED CURRENT C.U. AFTER 11/24/2021 30-21392 W/ SERVICE COMP 30-21515	ADC	12/14/2021	3757
K	ADDED 120V RSSL378	BJW	03/23/22	3785
L	UPDATED 120V RSSL WIRING DIAG 91-21065-18 WAS 91-21065-17	BJW	05/24/23	